


TOASTER
5740007830099

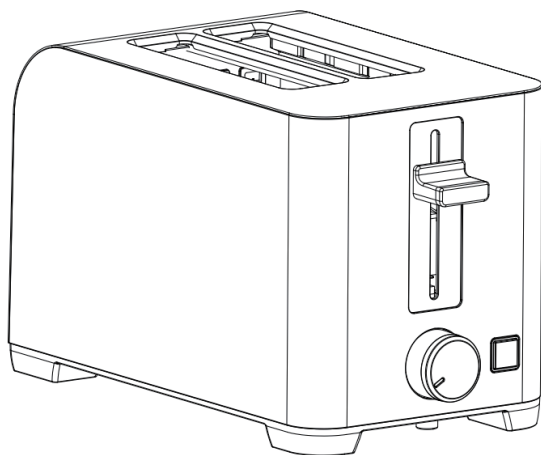

**Compact 2-slice
Toaster**

For your safety and continued enjoyment of this product,
always read the instruction manual carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions carefully.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow the appliance to cool before assembling or disassembling parts.
- Avoid touching hot surfaces – use handles or knobs.
- To prevent electric shock, do not immerse the cord, plug, or any part of the toaster in water or other liquids. Refer to the instructions for proper cleaning.
- The appliance should only be used by or near children under close supervision.
- Do not operate the appliance if the cord or plug is damaged, if it is not working properly, or if it has been dropped or otherwise damaged. Return the appliance to the nearest authorized service center for inspection, repair, or adjustment.
- Use of accessories not recommended by the manufacturer may result in injury.
- Do not use outdoors.
- Ensure that the cord does not hang over the edge of the table or counter, and does not touch hot surfaces.
- Never place the toaster on or near a hot gas or electric burner or in a heated oven.
- Use the appliance only for its intended purpose.
- Never insert oversized foods, metal foil, or utensils into the toaster – this may cause fire or electric shock.
- A fire may occur if the toaster is covered or touches flammable materials (such as curtains, walls, etc.) during use. Do not use it under cabinets.
- Do not attempt to remove jammed bread while the appliance is plugged in.
- To avoid fire, never leave the toaster unattended while in use.
- To turn off the appliance: Press the Stop button, then unplug it from the outlet.
- Do not operate the appliance inside a cabinet or under hanging cabinets. If stored in a cabinet, always unplug it first. Failure to do so may

result in a fire hazard, especially if the appliance touches the cabinet walls or door.

- Always insert the plug into the appliance first, then into the wall outlet. To turn off: Set all controls to “off” and unplug the unit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed in the safe use of the appliance.
- Children should be supervised to ensure that they do not play with the appliance. Bread may become burnt – therefore, do not use the appliance near flammable materials such as curtains.
- The appliance must not be operated by external timers or remote-control systems.
- Preheating the appliance is not necessary.

Extension Cords:

- a. A short power cord is provided to reduce the risk of entanglement or tripping.
- b. Extension cords may be used with care.
- c. The marked electrical rating of the extension cord must be at least as high as that of the appliance.
- d. The cord should be arranged so that it does not hang over the edge of the counter or table or be pulled on by children or cause a tripping hazard.

WARNING:

1. This appliance can be used by children aged 8 years and above, as well as by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children unless they are over 8 years old and supervised. Keep the appliance and its power cord out of reach of children under 8 years of age.
2. If the power cord is damaged, it must be replaced by the manufactur-

er, an authorized service center, or a similarly qualified person in order to avoid a hazard.

3. Bread may become burnt – therefore, do not use the toaster near or underneath flammable materials such as curtains.
4. This appliance is intended for household and similar use, including:
 - staff kitchen areas in shops, offices, and other working environments
 - farmhouses
 - use by clients in hotels, motels, and other residential-type environments
 - bed and breakfast-type settings

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

FEATURES AND BENEFITS

1. 24mm wide and 100mm deep slot.

Wide and deep slot toast a wide variety of items.

2. High lift carriage control lever

For 80mm high loaf slice, the top edge is not less than 20mm above toaster surface after the carriage pops up.

3. Browning control knob

Sets selected shade. Six browning levels toast from light to dark.

4. Stop button


Interrupts toasting process.

5. Removable crumb tray (not shown)

Pulls out to clean crumbs that collect in bottom of toaster.

6. Cord storage (not shown)

Takes up excess cord and keeps countertop neat.

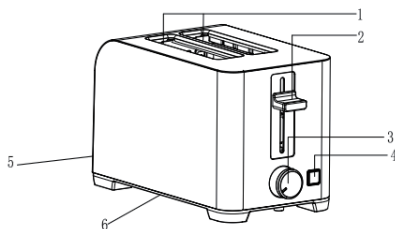

USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

- 1.Insert slice(s) of bread
- 2.Set the browning control

Turn the knob to select desired toast shade:

Browning control	Shade
1-2	Light
2-4	Medium
5-6	Shaddarke

Tips for Optimal Browning

Toasting is a combination of heating and drying. The moisture content of the bread greatly affects how long it needs to toast to reach the desired color. Here are some tips to get the best results:

- Slightly dry bread: Use a lower browning setting than usual.
- Fresh or whole wheat bread: Select a higher setting to account for the extra moisture.
- Breads with uneven surfaces: Typically need a higher setting for even browning.
- Thick slices: Require more time – very thick pieces may need two toasting cycles.
- Fruit breads (e.g., with raisins): Remove any loose fruit before toasting to prevent pieces from falling into the toaster or sticking to internal components.

Single Slice Toasting

When toasting a single slice of bread, select a lower browning setting than usual. The toaster is designed to heat the entire chamber for two slices. By lowering the heat when toasting only one slice, you help prevent over-browning.

Frozen Items: Waffles, Pancakes, French Toast, and Bagels

These types of bread and pastries should be heated using the **Defrost button**.

Toaster Pastries (with filling)

Use caution when toasting pastries with filling – the inside may become very hot before the surface browns. Never leave toaster pastries unattended while toasting or warming.

How to Toast Bread

1.Insert slice(s)

Make sure multiple slices do not overlap and the carriage is in the up position.

2.Set the browning control

Turn the knob to choose your desired toast shade.

3.Start toasting

Press down the carriage lever until it locks in place.

4.Stop toasting

When the toasting cycle is complete, the toast will automatically rise. To stop the cycle manually, press the Stop button.

Usage Tips

- Never force food into the toaster slots. Items should fit freely between the guide wires.
- Do not place buttered bread or pastries with filling or frosting into the toaster, as this may cause a fire hazard.
- Uneven toasting is usually due to bread slices with varying thickness.
- Always unplug the toaster after use.

Stop Button

To stop cycle

When cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Stop button to interrupt. After use, unplug the toaster from the electrical outlet.

Browning Setting	Recommended For
1-2	Refrigerated breads and thin frozen items like pancakes
2-4	Toaster pastries, frozen waffles, thin French toast, refrigerated bagels
5-6	Thicker frozen items like bagels, hand-cut bread, and thick French toast

CLEANING AND MAINTENANCE

1.Always unplug before cleaning

Ensure the toaster is disconnected from the power supply before any cleaning is done.

2.Gently clean the exterior

Do not use abrasive cleaners. Wipe the exterior with a clean, damp cloth, then dry thoroughly.

If using a cleaning product, apply it to the cloth – never directly onto the toaster.

3.Empty and clean the crumb tray

Slide out the crumb tray, discard crumbs, and wipe it clean.

Replace the tray properly before using the toaster again.

Never operate the toaster without the crumb tray in place.

4.Remove trapped bread safely

Turn the toaster upside down and gently shake it to release any stuck pieces of bread.

Never insert sharp or hard objects into the slots, as this can damage the appliance and create a safety hazard.

5.Cord storage

Do not wrap the cord around the toaster.

Use the built-in cord storage cleats underneath the unit.

6.Servicing and repair

Any further servicing or repair should only be performed by an authorized service technician.



DISPOSAL GUIDELINES


Electrical and electronic equipment contains materials, components, and substances that may be hazardous and harmful to human health and the environment if waste electrical and electronic equipment (WEEE) is not disposed of properly.

Products marked with a "crossed-out wheeled bin" symbol are electrical and electronic equipment. This symbol indicates that such waste must not be disposed of with unsorted household waste, but must be collected separately.

To facilitate this, all municipalities have established collection systems where waste electrical and electronic equipment can be delivered free of charge by citizens at recycling centers or other designated collection points, or in some cases collected directly from households.

For more detailed information, please contact your local municipal waste management authority.

BRØDRISTER
5740007830099

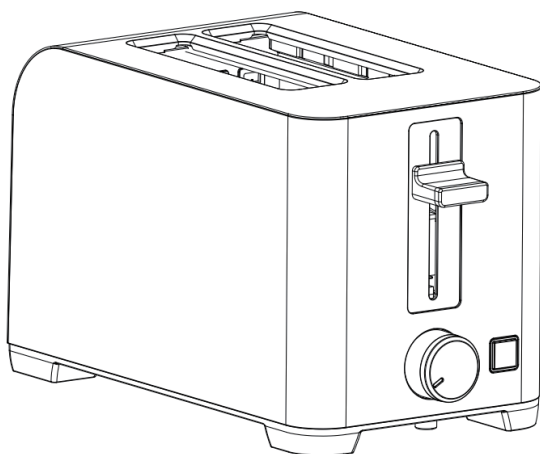

Kompakt 2-skivers

Brødrister

For din sikkerhed og fortsatte glæde ved dette produkt,
læs altid brugsanvisningen grundigt før brug.

VIGTIGE SIKKERHEDSFORANSTALTNINGER

Når du bruger et elektrisk apparat, skal grundlæggende sikkerhedsforanstaltninger altid følges, herunder følgende:

- Læs alle instruktioner grundigt.
- Tag altid stikket ud af stikkontakten, når apparatet ikke er i brug, og før rengøring. Lad apparatet køle af, før du samler eller adskiller dele.
- Undgå at røre ved varme overflader – brug håndtag eller knapper.
- For at undgå elektrisk stød må ledning, stik eller nogen del af brødristeren ikke nedsænkes i vand eller andre væsker. Se instruktionerne for korrekt rengøring.
- Apparatet må kun bruges af eller i nærheden af børn under tæt opsyn.
- Brug ikke apparatet, hvis ledningen eller stikket er beskadiget, hvis det ikke fungerer korrekt, eller hvis det er tabt eller på anden måde beskadiget. Returnér apparatet til nærmeste autoriserede servicecenter for inspektion, reparation eller justering.
- Brug af tilbehør, der ikke anbefales af producenten, kan medføre personskaade.
- Må ikke bruges udendørs.
- Sørg for, at ledningen ikke hænger ud over bord- eller bordkanten og ikke rører ved varme overflader.
- Placer aldrig brødristeren på eller nær en varm gas- eller elektrisk kogeplade eller i en opvarmet ovn.
- Brug kun apparatet til dets tiltænkte formål.
- Indsæt aldrig for store madvarer, metalfolie eller redskaber i brødristeren – dette kan forårsage brand eller elektrisk stød.
- Der kan opstå brand, hvis brødristeren dækkes til eller rører ved brændbare materialer (såsom gardiner, vægge osv.) under brug. Brug den ikke under skabe.
- Forsøg ikke at fjerne fastklemt brød, mens apparatet er tilsluttet.
- For at undgå brand må brødristeren aldrig efterlades uden opsyn under brug.
- For at slukke apparatet: Tryk på Stop-knappen, og tag derefter stikket ud af stikkontakten.
- Brug ikke apparatet inde i et skab eller under hængende skabe. Hvis det opbevares i et skab, skal det altid være frakoblet først. Undladelse heraf kan medføre brandfare, især hvis apparatet rører ved skabets vægge eller dør.

- Sæt altid stikket i apparatet først, derefter i stikkontakten. For at slukke: Indstil alle kontroller til "off" og tag stikket ud.
- Dette apparat er ikke beregnet til brug af personer (herunder børn) med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, medmindre de er under opsyn eller instrueret i sikker brug af apparatet.
- Børn skal overvåges for at sikre, at de ikke leger med apparatet. Brød kan blive brændt – brug derfor ikke apparatet nær brændbare materialer som gardiner.
- Apparatet må ikke betjenes af eksterne timere eller fjernbetjeningsystemer.
- Forvarmning af apparatet er ikke nødvendig.blefare.

Forlængerledninger:

- A. En kort strømledning er medtaget for at mindske risikoen for sammenfiltring eller snubelfare.
- B. Forlængerledninger kan bruges med forsigtighed.
- C. Den angivne elektriske mærkning på forlængerledningen skal mindst svare til apparatets.
- D. Ledningen skal placeres, så den ikke hænger ud over kanten på bordet eller trækkes i af børn eller forårsager snubelfare.

ADVARSEL:

Dette apparat kan bruges af børn fra 8 år og opefter samt af personer med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, hvis de er under opsyn eller instrueret i sikker brug af apparatet og forstår de mulige farer.

Børn må ikke lege med apparatet. Rengøring og vedligeholdelse må ikke udføres af børn, medmindre de er over 8 år og under opsyn.

Hold apparatet og dets strømledning uden for rækkevidde for børn under 8 år.

Hvis strømledningen er beskadiget, skal den udskiftes af producenten, et autoriseret servicecenter eller en tilsvarende kvalificeret person for at undgå fare.

Brød kan blive brændt – brug derfor ikke brødristeren nær eller under

brændbare materialer som gardiner.


Dette apparat er beregnet til husholdningsbrug og lignende anvendelser, herunder:

- personalekøkkener i butikker, kontorer og andre arbejdsmiljøer
- gårde
- brug af gæster på hoteller, moteller og andre boligtyper
- bed & breakfast-miljøer

GEM DISSE INSTRUKTIONER - KUN TIL HUSHOLDNINGSBRUG

FUNKTIONER OG FORDELE FUNKTIONER

- 24 mm bred og 100 mm dyb ristespalte.
- Bred og dyb spalte rister mange forskellige typer brød.
- Høj løftehåndtag.
- For 80 mm høje brødskeer er toppen mindst 20 mm over brødristerens overflade, når brødet popper op.
- Ristningskontrolknap.
- Indstiller ønsket ristningsgrad. Seks niveauer fra lys til mørk.
- Stop-knap.
- Afbryder ristningsprocessen.
- Udtagelig krummebakke (ikke vist).
- Trækkes ud for at fjerne krummer i bunden af brødristeren.
- Ledningsopbevaring (ikke vist).
- Opbevarer overskydende ledning og holder bordet ryddeligt.

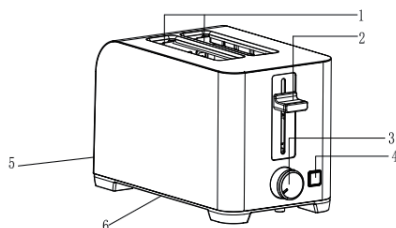

BRUG OG VEDLIGEHOLDELSE

Rul ledningen ud. Kontroller, at krummebakken er på plads, og at der ikke er noget i ristespalterne. Sæt stikket i stikkontakten.

1. Indsæt brødskeer.

2. Indstil ristningsgraden.

Drej knappen for at vælge ønsket ristningsgrad.

Ristningsindstilling	Farve
1-2	Lys
2-4	Medium
5-6	Mørk

Tips til optimal ristning

- Ristning er en kombination af opvarmning og tørring. Brødets fugtindhold påvirker, hvor lang tid det skal ristes for at opnå den ønskede farve. Her er nogle tips:
- Let tørt brød: Brug en lavere indstilling end normalt.
- Frisk eller fuldkornsbrød: Vælg en højere indstilling pga. ekstra fugt.
- Brød med ujævn overflade: Kræver typisk en højere indstilling for jævn ristning.
- Tykke skiver: Kræver længere tid – meget tykke stykker kan kræve to ristecykler.
- Frugtbrød (f.eks. med rosiner): Fjern løst frugt før ristning for at undgå, at stykker falder ned eller sætter sig fast.

Ristning af en enkelt skive

- Ved ristning af en enkelt skive bør du vælge en lavere indstilling end normalt. Brødristeren varmer hele kammeret for to skiver. Ved kun én skive hjælper lavere varme med at undgå overristning.

Frosne varer: Vafler, pandekager, franskbrød og bagels

- Disse typer brød og bagværk bør varmes med optøningsknappen (Defrost).

Bagværk med fyld

- Vær forsigtig, når du rister bagværk med fyld – indersiden kan blive meget varm, før overfladen brunes. Efterlad aldrig bagværk uden opsyn under ristning eller opvarmning.

Sådan rister du brød

- Indsæt skiver (sørg for, at flere skiver ikke overlapper, og at løftearmen er oppe).
- Indstil ristningsgraden (drej knappen for at vælge ønsket farve).
- Start ristning (tryk løftearmen ned, til den låser).
- Stop ristning (når cyklussen er færdig, popper brødet automatisk op. For at stoppe manuelt, tryk på Stop-knappen).

Brugertips

- Tving aldrig mad ned i ristespalterne. Emnerne skal frit kunne være mellem spalterne.
- Læg ikke smurt brød eller bagværk med fyld eller glasur i brødristeren, da dette kan forårsage brandfare.
- Ujævn ristning skyldes ofte brødskiver med forskellig tykkelse.
- Tag altid stikket ud efter brug.

Stop-knap

- Når cyklussen er færdig, løfter brødristeren brødet. Ønsker du at afbryde før tid, tryk på Stop-knappen. Tag altid stikket ud efter brug.

Bruningsindstilling	Anbefales til
1-2	Køleskabsbrød og tynde frosne varer såsom pandekager
2-4	Bagværk, frosne vafler, tyndt franskbrød, køleskabsbagels
5-6	Tykke frosne varer såsom bagels, hjemmebagt brød og tykt franskbrød/toastbrød.

RENGØRING OG VEDLIGEHOLDELSE

1.Tag altid stikket ud før rengøring.

Sørg for, at brødristeren er frakoblet strøm, før du gør rent.

2.Rengør ydersiden forsigtigt – brug ikke slibende rengøringsmidler.

Tør ydersiden af med en ren, fugtig klud og tør grundigt efter.Hvis du bruger rengøringsmiddel, påfør det på kluden – aldrig direkte på brødristeren.

3.Tøm og rengør krummebakken (skub den ud, tøm krummerne, og tør den af).

4.Sæt bakken korrekt på plads, før brødristeren bruges igen.

Brug aldrig brødristeren uden krummebakken på plads.Fjern fastklemt brød sikkert (vend brødristeren på hovedet og ryst forsigtigt for at løsne fastsiddende stykker).Indsæt aldrig skarpe eller hårde genstande i ristespalterne, da dette kan beskadige apparatet og skabe fare.

5.Ledningsopbevaring: Vikl ikke ledningen rundt om brødristeren.

Brug de indbyggede ledningsholdere under enheden.

6.Service og reparation: Yderligere service eller reparation må kun udføres af en autoriseret servicetekniker.



SORTERINGSVEJLEDNING: Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning