



Premium Digital Bordgrill




VIGTIGE FORANSTALTNINGER

LÆS ALLE INSTRUKTIONER

- Brug kun ved AC 220-240 Volt, 50/60 Hz. Brug kun til husholdningsformål.
- Berør ikke varme overflader. Brug håndtag og knap.
- For at beskytte mod risikoen for elektrisk stød må du ikke nedsænke ledningen, stikket eller kogeenheden i vand eller andre væsker.
- Tæt opsyn er nødvendigt, når en hvilken som helst apparat bruges af eller i nærheden af børn.
- Tag stikket ud af stikkontakten, når det ikke er i brug, og før rengøring. Lad det køle af, før du sætter dele på eller tager dem af, og før du rengør apparatet.
- Betjen ikke noget apparat, der har en beskadiget, funktionsfejl eller er blevet beskadiget på nogen måde. For at undgå risikoen for elektrisk stød må du aldrig forsøge at reparere Press Grill selv. Tag den til en autoriseret servicestation for undersøgelse og reparation. Forkert samling kan udgøre en risiko for elektrisk stød ved brug af Press Grill.
- Brug af tilbehør, som ikke anbefales af producenten, kan medføre brand, elektrisk stød eller risiko for personskade.
- Brug ikke udendørs eller til kommercielle formål.
- Lad ikke strømkablet hænge ud over kanten af bordet eller disken eller røre ved varme overflader.
- Placer ikke på eller nær en varm gas- eller elektrisk brænder eller opvarmet ovn.
- Tag stikket ud, når enheden er færdig med at blive brugt.


- Udvis ekstrem forsigtighed, når du flytter et apparat.

INDIKATION AF DELE

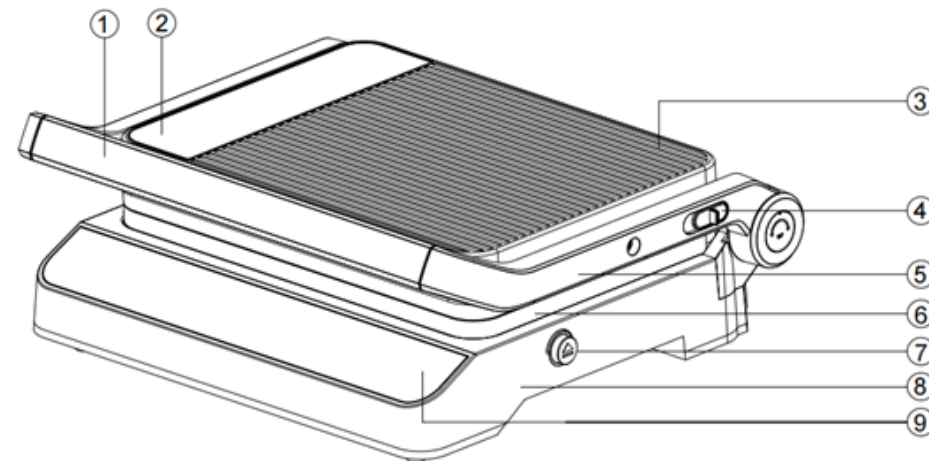

1. Håndtag
2. Rustfrit stål dekoration
3. Øverste hus
4. 180 graders åben knap
5. Aluminiumshåndtag
6. Plade
7. Plade frigivelsesknappen
8. Nederste hus
9. Kontrolpanel

VEJLEDNING

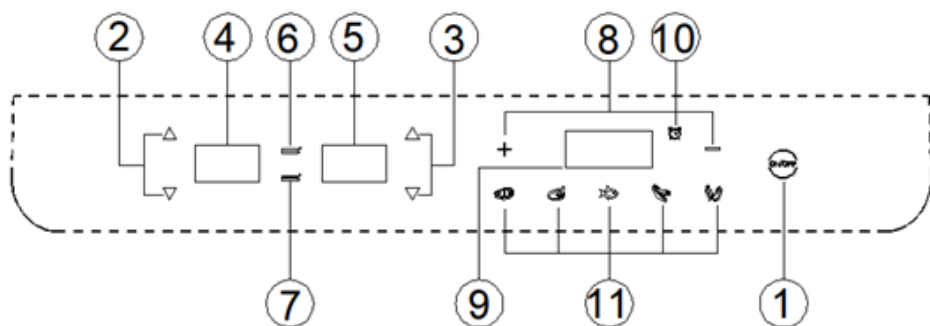

STRØMAFBRYDER (1):

- I standby-tilstand er strømafbryderen i en pulserende blinkende tilstand
- I arbejdsmodus lyser strømafbryderen
- Berør strømafbryderen for at tænde strømmen
- Berør strømafbryderen for at stoppe prompttonen
- Tryk i 3 sekunder for at slukke for strømmen

TEMPERATURREGULATORER TIL ØVERSTE PLADE (2):

- Tænd for strømmen, og temperaturregulatorerne blinker
- Maskinen er i arbejdstilstand, og temperaturregulatorerne er normalt tændt
- Hver berøring øger/nedsætter med 5 grader
- Langt tryk for kontinuerlig stigning/nedsættelse

TEMPERATURREGULATORER TIL NEDRE PLADE (3):

- Tænd for strømmen, og temperaturregulatorerne blinker

- Maskinen er i arbejdstilstand, og temperaturregulatorerne er normalt tændt
- Hver berøring øger/nedsætter med 5 grader
- Langt tryk for kontinuerlig stigning/nedsættelse

TEMPERATURDISPLAY FOR ØVERSTE PLADE (4):

- Tændt viser 000°
- Temperaturindstillingsområde 90-230°
- Efter indstilling af temperaturen blinker lyset tre gange for at starte arbejdet
- I arbejdstilstand er lyset normalt tændt

TEMPERATURDISPLAY FOR NEDRE PLADE (5):

- Tændt viser 000°
- Temperaturindstillingsområde 90-230°
- Efter indstilling af temperaturen blinker lyset tre gange for at starte arbejdet
- I arbejdstilstand er lyset normalt tændt

OPVARMNINGSDISPLAY FOR ØVERSTE PLADE (6):

- Tænd for strømmen, lyset er i hvid farve, det er normalt tændt
- Når der opvarmes, er lyset i rød farve og begynder at blinke
- Når opvarmningen stopper, er lyset i rød farve og normalt tændt

OPVARMNINGSDISPLAY FOR NEDRE PLADE (7):

- Tænd for strømmen, lyset er i hvid farve, det er normalt tændt
- Når der opvarmes, er lyset i rød farve og begynder at blinke
- Når opvarmningen stopper, er lyset i rød farve og normalt tændt

TIMER-KONTROLKNAPPER (8):

- Hver berøring øger/nedsætter med et minut
- Langt tryk for kontinuerlig stigning/nedsættelse
- I arbejdstilstand er lyset normalt tændt

TIMERDISPLAY (9):

- Tændt viser 0:00
- Timerområde fra 1 minut til 4 timer.
- Efter indstilling af timeren starter nedtællingen, og lyset blinker tre gange.
- Uden indstilling af timer er lyset normalt tændt.

TIMERSTATUSDISPLAY (10):

- Hvis nedtællingen starter, er lyset normalt tændt
- Uden indstilling af timer eller hvis timeren er stoppet, er lyset slukket

Program	Tid	Temperatur (°C)
Grøntsager	8	200
Pølser	10	220
Fisk	8	210
Kylling	7	230
Steak	8	230

Uden at starte automatisk tilstand er lyset i hvid farve, det er normalt tændt.

Tryk i 3 sekunder for at tænde en automatisk tilstand, lyset skifter til grøn farve.

Når en automatisk tilstand er aktiv, kan du øge/nedsætte tid og/eller temperatur efter eget ønske.

Tryk i 3 sekunder for at slukke for en automatisk tilstand, hvis du ønsker at stoppe den.

FØR FØRSTE BRUG

- Læs alle instruktioner omhyggeligt og gem dem til fremtidig reference.
- Fjern al emballage.
- Rengør de kogende plader ved at tørre dem med en svamp eller klud fugtet i varmt vand.

DYK IKKE MASKINEN, OG LAD IKKE VAND LØBE DIREKTE PÅ DE KOGENDE FLADER.

- Tør af med en klud eller papirhåndklæde.
- For bedste resultater, påfør let et tyndt lag madolie eller madlavningspray på de kogende plader.

Bemærk: Når din grill er opvarmet for første gang, kan den afgive let røg eller lugt. Dette er normalt for mange opvarmningsapparater. Dette påvirker ikke sikkerheden ved dit apparat.

SÅDAN BRUGES DET

Indsæt stikket i vægkontakten; Der lyder en kort biplyd, og tænd/sluk-knappen vil blinke i et åndedrætsmønster. Hvis manuel tilstand er valgt, starter grillen forvarmning. Efter forvarmningen er afsluttet, lyder der en bip, bip, bip-lyd, hvilket betyder, at grillen er klar til madlavning. Åbn låget, læg sandwich, kød eller andre fødevarer på den nederste stegeplade. Luk derefter låget. Når madlavningen er færdig, lyder der igen en bip, bip, bip-lyd. Under madlavningen kan du justere temperaturen og/eller tiden efter dine præferencer.

BEMÆRKNINGER:

1. Den ønskede temperatur kan indstilles mellem 90° og 230°.
2. Prøv først en indstilling på det maksimale for forvarmning. Du kan

senere justere det ned, afhængigt af dine præferencer. Hvis en af de automatiske tilstande er valgt, vises den tilsvarende tid og temperatur på displayet. Der lyder en bip, bip, bip-lyd efter forvarmning. Åbn grillen, læg sandwich, kød eller andre fødevarer på den nederste stegeplade. Efter nedtællingen er slut, vil der lyde 5 bip for at tipse brugeren om, at madlavningen er færdig.

3. Efter tryk på strømafbryderen lyser skærmen op. Hvis der ikke er nogen anden operation i fem minutter, slukker skærmen automatisk og skifter til standby-tilstand.
4. Efter tryk på strømafbryderen, hvis kun opvarmningsfunktionen bruges, og timerfunktionen ikke bruges, slukker enheden automatisk og skifter til standby-tilstand efter 2 timer og 25 minutter.
5. Efter at forvarmningen er afsluttet, og advarselslyden starter, hvis advarslen ikke slukkes manuelt inden for 2 minutter, vil systemet nulstille den uovervågede parameter som standard efter 2 minutter. Skærmen slukkes automatisk efter 5 minutter og skifter til standby-tilstand.

BEMÆRKNINGER:

1. I henhold til personlig smag kan du øge eller mindske tid og/eller temperatur, når du bruger automatisk tilstand.
2. Når maden er færdig, skal du bruge håndtaget til at åbne låget. Fjern maden med en plastikspatel.
3. Når du er færdig med at lave mad, skal du trække stikket ud af stikkontakten og lade enheden stå åben for at køle af.

BEMÆRKNINGER:

1. Der lyder en kort bip ved hver tastetryk.
2. Tryk samtidig på grøntsags og kødstavtasterne for at annullere tasterne, hvis det er nødvendigt.
3. Pas på forbrændinger, når du placerer maden efter forvarmning.
4. Brug aldrig metalkniv eller skarpe genstande, da disse kan beskadige den non-stick-belægning af stegepladerne.


FEJLKODE

Display	Cause	Solution
E00	Open circuit	Return to after-sales
E11	Short circuit	Return to after-sales
E44	Overheating protection	Power off and let unit cool down completely, then restart it

SORTERINGSVEJLEDNING


Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affald af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med symbolet “overkrydsede skraldespand”, er elektrisk og elektronisk udstyr. Den overkrydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgere på genbrugsstationer eller andre indsamlingssteder, eller hentes direkte fra husholdningerne. For yderligere information, kontakt kommunens tekniske forvaltning.

PARTS IDENTIFICATION

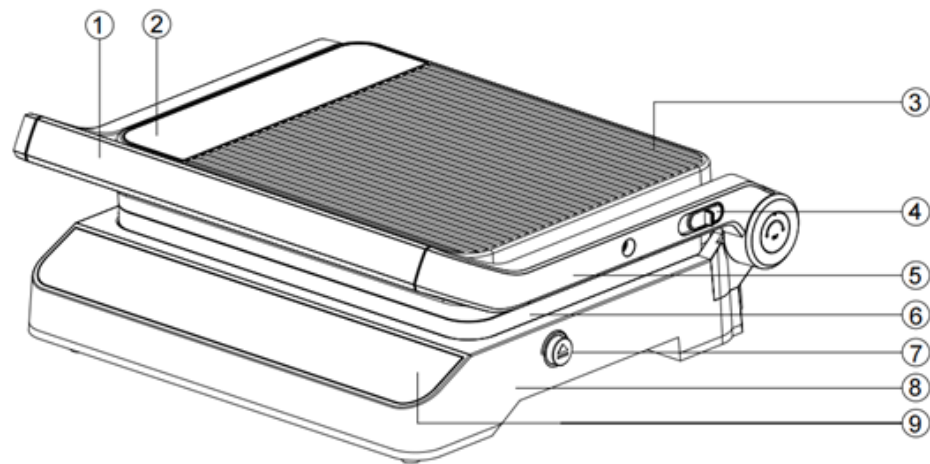

1. Handle
2. Stainless steel decoration
3. Upper housing
4. 180 degree open button
5. Aluminum handle
6. Plate
7. Plate release button
8. Bottom housing
9. Control panel

OPERATIONAL GUIDANCE

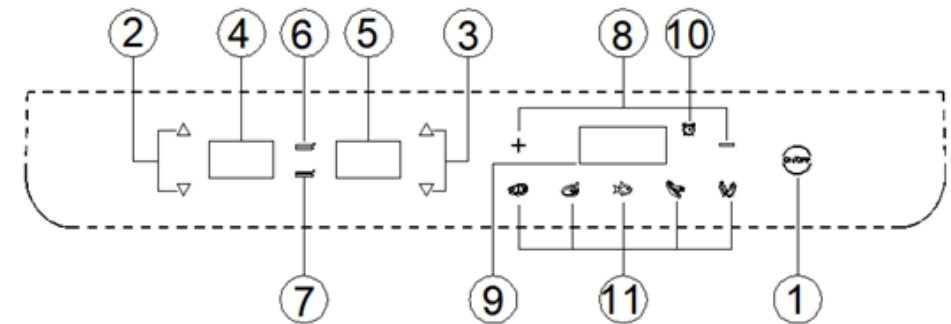

POWER SWITCH (1):

- In standby, power switch is on breathing flash state
- In working mode, power switch is lighting
- Touch power switch to turn on the power
- Touch power switch to stop prompt tone
- Press 3 seconds to turn off the power

TEMPERATURE REGULATORS FOR UPPER PLATE (2):

- Turn on power, temperature regulators flashing
- The machine is working condition, temperature regulators are normal on
- Each touch increase/decrease 5 degrees
- Long press continuous increase/decrease

TEMPERATURE REGULATORS FOR LOWER PLATE (3):

- Turn on power, temperature regulators flashing
- The machine is working condition, temperature regulators are normal on
- Each touch increase/decrease 5 degrees
- Long press continuous increase/decrease

TEMPERATURE DISPLAY FOR UPPER PLATE (4):

- Power on indicates 000°
- Temperature setting range 90-230°
- After temperature is setting, light flashing three times to start working
- In working condition, the light is normal on

TEMPERATURE DISPLAY FOR LOWER PLATE (5):

- Power on indicates 000°
- Temperature setting range 90-230°
- After temperature is setting, light flashing three times to start working
- In working condition, the light is normal on

HEATING DISPLAY FOR UPPER PLATE (6):

- Turn on power, the light is in white color, it is normal on
- When heating, light is in red color and starts to flashing
- When stop heating, light is in red color and normal on

HEATING DISPLAY FOR LOWER PLATE (7):

- Turn on power, the light is in white color, it is normal on
- When heating, light is in red color and starts to flashing
- When stop heating, light is in red color and normal on

TIMER CONTROL BUTTONS (8):

- Each touch increase/decrease one minute
- Long press continuous increase/decrease
- In working condition,the light is normal on

TIMER DISPLAY (9):

- Power on indicates 0:00

- Timer range from 1 minute to 4 hours.
- After timer is setting,countdown starts light flashing three times.
- Without setting timer,light is normal on

TIMER STATUS DISPLAY (10):

- If countdown starts,light is normal on
- Without setting timer or timer is stopper,light is off

Programmes	Time(minutes)	Temperature (°C)
Vegetables	8	200
Sausage	10	220
Fish	8	210
Chicken	7	230
Beef steak	8	230

- Without start auto mode,the light is in white color,it is normal on
- Press 3 seconds to turn on an auto mode,the light turns in green color
- When an auto mode is on,you can increase/decrease time and/or temperature according to own taste
- Press 3 seconds to turn off an auto mode if you want to stop it

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONT THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

NOTICE: WHEN YOUR GRILL IS HEATED FOR THE FIRST TIME, IT MAY EMIT SLIGHT SMOKE OR ODOR. THIS IS NORMAL WITH MANY HEATING APPLIANCES. THIS DOES NOT AFFECT THE SAFETY OF YOUR APPLIANCE.

HOW TO USE

Insert the plug into the wall socket; There is a short beep sound,and the power button will breathing flash

If manual mode has been selected,the grill is starting preheating.

After preheating is finished,Beep beep beep sound will ring out, it means the grill is ready for cooking.

Open the lid, put the sandwich, meat or other foods on the bottom cooking plate.

The close the lid.

Once cooking is finished,beep beep beep sound will ring out again

During cooking,you can adjust temperature and/or time according to your preference.

NOTES

1. The desired temperature can be set between 90° and 230°.the desired temperature can be set between 90° and 230°.
2. At first, try a setting in the max for

preheating.You may later adjust it lower according to your preference.

If one of the 5 auto modes is selected.The display will show the corresponding time and temperature. Beep beep beep sound will ring out after preheating.

Open the grill, put the sandwich, meat or other foods on the bottom cooking plate. After countdown over,there is 5 beep will ring out to tip user that cooking is finished.

3. After press the Power Switch, the screen lights up. If without any other operation in five minutes, the screen will automatically extinguish and switch to the standby state.
4. After press the Power Switch, only use the Heating function and not use the Timer function, the device will automatically shut down and switch to the standby state after 2hours and 25 minutes.
5. After the preheating is complete and the prompt sound starts up, if the prompt is not turned off manually within 2 minutes, the system will clear the unattended parameter by default after 2 minutes. It will be automatically extinguish the screen after 5 minutes and switch to the standby state.

NOTES

6. According to personal taste,you can increase or decrease time and/or temperature when you use auto mode.
7. When the food is cooked use the handle to open the lid. Remove the foods with plastic spatula. .
8. Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

NOTES

1. A short beep will sound when each key press.
2. Press vegetables and beef stick keys simultaneously to cancel key tone if need be.
3. Pay attention to burns when you place food after preheating
4. Never use metal knife or sharp things as these can cause damage to the non-stick coating of the cook plates.

FEJLKODE

Display	Årsag
E00	Åben låget
E11	Kort slutning
E44	Overophedningsbeskyttelse Sluk for strømmen og lad enheden køle helt ned, og genstart den derefter.

CLEANING AND CARE

- Always unplug the Grill and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Grill for cleaning. Never immerse the Grill in water or place in dishwasher.
- Wipe cooking plates with a soft to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the grill toaster with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface.
Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Grill before storage.
- Always make sure the Grill is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.

Electrical appliances, accessories and their packaging must be reused as much as possible in an environmentally sound manner. Do not dispose of these items together with your normal rubbish. Only for EU countries

According to the European 2002/96/EG WEEE Guideline on the disposal of old electric and electronic appliances, the appliances that are no longer used must be collected and recycled in an environmentally sound manner.



IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS

- Use only on AC 220-240 Volt, 50/60 Hz.
Use only for household.
- Do not touch hot surfaces. Use handles and knob.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Press Grill yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the Press Grill is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance

SORTING INSTRUCTIONS

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment when waste electrical and electronic equipment (WEEE) is not disposed of properly.

Products marked with the “crossed-out trash can” symbol are electrical and electronic equipment. The crossed-out trash can symbolizes that waste electrical and electronic equipment should not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste electrical and electronic equipment can be dropped off free of charge by residents at recycling stations or other collection points, or can be picked up directly from households. For further information, contact the municipality's technical department.