

Sobczyk

SLUSH ICE MAKER 2L

BRUGERMANUAL CS-6450

USERMANUAL CS-6450



VIGTIGE SIKKERHEDSFORANSTALTNINGER**LÆS ALLE INSTRUKTIONER FØR BRUG AF APPARATET**

For at mindske risikoen for brand, eksplosion, elektrisk stød eller personskade ved brug af din maskine til frosne drikke, skal du følge disse grundlæggende sikkerhedsforanstaltninger:

1. Læs alle instruktioner, før apparatet og dets tilbehør tages i brug.
2. Overhold alle advarsler og instruktioner nøje. Enheden indeholder elektriske forbindelser og bevægelige dele, som potentielt udgør en risiko for brugeren.
3. Tjek indholdet for at sikre, at du har alle de nødvendige dele til sikker og korrekt brug af apparatet.
4. Efter udpakning første gang skal enheden stå oprejst i mindst 2 timer, før den tages i brug, for at kølemidlets olie kan sætte sig korrekt i kølesystemet og sikre optimal ydeevne.
5. Sluk altid apparatet og tag stikket ud af kontakten, når det ikke er i brug, samt før samling, adskillelse og rengøring.
6. Før brug skal alle dele, der kommer i kontakt med fødevarer, vaskes i henhold til instruktionerne i denne manual.
7. BRUG IKKE apparatet, hvis ledningen eller stikket er beskadiget, eller hvis apparatet ikke fungerer korrekt, er tabt eller på anden måde beskadiget. Apparatet indeholder ingen dele, som brugeren selv kan reparere. Kontakt en autoriseret forhandler for service.
8. Forlængerledninger må IKKE bruges sammen med dette apparat.
9. For at beskytte mod elektrisk stød må apparatet IKKE nedsænkes i væske, og ledningen må ikke komme i kontakt med nogen form for væske.
10. Lad IKKE ledningen hænge ud over kanten af borde eller køkkenborde, da det kan få apparatet til at falde ned.
11. Lad IKKE enheden eller ledningen komme i kontakt med varme overflader som komfurer eller andre varmeapparater.
12. Brug ALTID apparatet på en tør og plan overflade.
13. Brug KUN det medfølgende tilbehør og de medfølgende dele.
14. Hold hænder, hår og tøj væk fra beholderen under brug.
15. Undgå kontakt med bevægelige dele under brug og håndtering.
16. LAD ALDRIG apparatet være uden opsyn under brug.
17. Før brug skal du sikre dig, at alle redskaber er fjernet fra beholderne. Redskaber i beholderne kan forårsage skader og personskade.
18. ADVARSEL: Put ikke beholderne eller tilbehøret i mikroovnen.
19. ADVARSEL: Sørg ALTID for, at ventilationsåbninger i kabinettet eller den indbyggede struktur er fri for blokering.
20. ADVARSEL: Brug IKKE mekaniske anordninger eller andre metoder til at fremskynde afrimning, medmindre det er anbefalet af producenten.
21. ADVARSEL: Beskadig IKKE kølekredsløbet. Gælder kun apparater med kølekredsløb, der er tilgængelige for brugeren.
22. ADVARSEL: Brug IKKE elektriske apparater inde i fødevareropbevaringsrum, medmindre det er godkendt af producenten.
23. ADVARSEL: Tilsæt IKKE frosne frugter, frosne grøntsager eller is i enheden.
24. ADVARSEL: Tilsæt IKKE varme ingredienser i enheden.
25. ADVARSEL: Motorbasen og betjeningspanelet må IKKE nedsænkes i vand eller andre væsker.
26. ADVARSEL: Fyld IKKE beholderen over MAX FYLD-linjen.

27. ADVARSEL: Processér IKKE hårde, løse ingredienser eller is. Apparatet er ikke beregnet til løse frosne frugter, isblokke eller isterninger.
28. Hold ALTID enheden oprejst.
29. Dette apparat er IKKE beregnet til brug af personer (inkl. børn) med nedsat fysisk, sensorisk eller mental kapacitet, eller manglende erfaring, medmindre de er under opsyn eller instrueret af en ansvarlig person. Børn må ikke lege med apparatet.
30. Sørg for, at bagsiden og siderne af enheden er åbne, så kompressoren kan fungere korrekt uden overophedning.
31. Hold ventilationsåbninger i kabinettet eller den indbyggede struktur fri for blokering.
32. ADVARSEL: Brug IKKE mekaniske anordninger eller andre midler til at fremskynde afrimning, medmindre det anbefales af producenten.
33. Beskadig IKKE kølekredsløbet. Denne advarsel gælder kun for apparater med tilgængelige kølekredsløb.
34. Ved brug skal du sikre, at begge sider og bagsiden af enheden er mindst 10,2 cm (fire tommer) fra vægge.


ADVARSEL: Risiko for brand / brandfarlige materialer

ADVARSEL: Når apparatet placeres, skal du sikre, at strømledningen ikke bliver klæmt eller beskadiget. PLACER IKKE flere transportable stikdåser eller bærbar strømme kilder bag på apparatet.


ADVARSEL: Ved håndtering, installation og brug af apparatet skal der udvises forsigtighed for at undgå beskadigelse af kølemiddelledningerne.


ADVARSEL: Bortskaf køleskabet i overensstemmelse med nationale og lokale bestemmelser. Det brandfarlige kølemiddel og isoleringsmaterialet, der anvendes i dette produkt, kræver særlig bortskaffelse. Kontakt dine lokale myndigheder for miljømæssigt forsvarlig bortskaffelse af dit køleskab.
sdsad

DELTILISTE

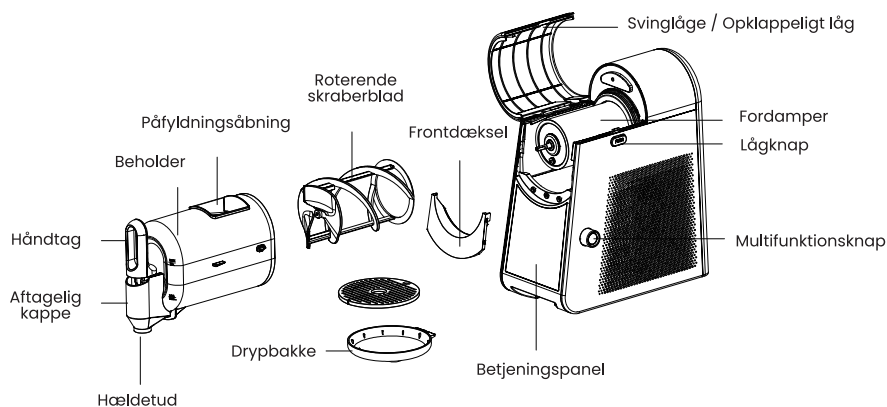

BRUG AF BETJENINGSPANELET

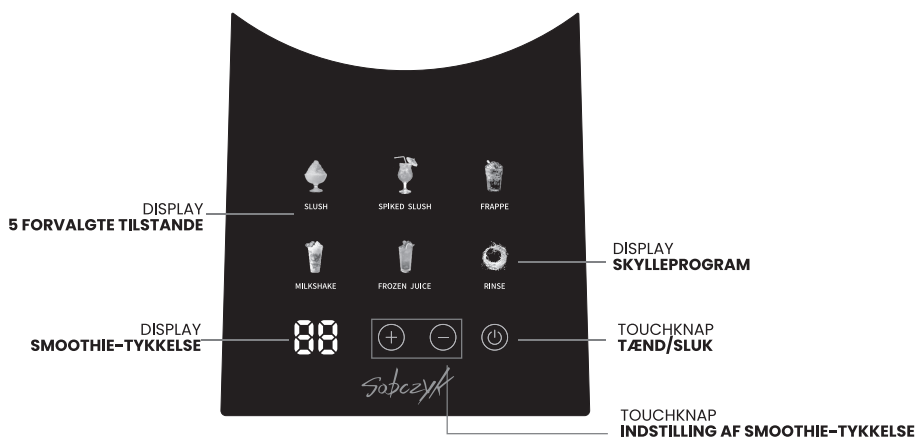

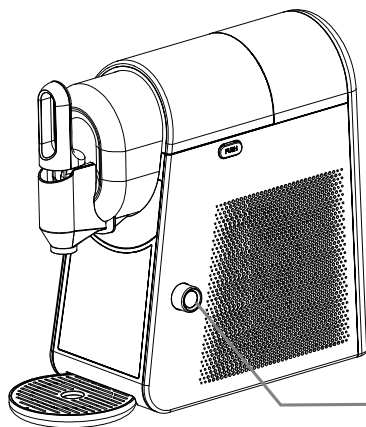

Multifunktionsknap

Betjening af Multifunktionsknap

- **Vælg funktion:** Drej knappen med eller mod uret for at bladre gennem de 5 forudindstillede tilstande og SKYLLEPROGRAM.
- **Aktivér funktion:** Tryk på knappen for at starte den valgte funktion.
- **Pause/Genoptag:** Tryk på knappen

igen for at sætte på pause; tryk endnu en gang for at genoptage.

- **Skift funktion:** Drej knappen når som helst for at vælge en ny tilstand, mens enheden er på pause.

Indstilling af smoothie-tykkelse + / -

- **Formindsk tykkelsen** ved at trykke på “-” på betjeningspanelet.
- **Forøg tykkelsen** ved at trykke på “+” på betjeningspanelet.

FORUDINDSTILLEDE TILSTANDE

TILSTAND	STANDARD TEMPERATUR	DESIGNET TIL	EKSEMPLER	UNDGÅ	ANBEFALET TEMPERATUR
SLUSH	2	Forvandle dine hverdagsdrikke	Sodavand, lemonade	Light-sodavand (f.eks. diet soda)	8
SLUSH MED ALCOHOL	9	Drikkevarer med alkoholinhold	Margarita, rosé		10
FRAPPÉ	2	Kaffeelskere, der vil lave frosne lækkerier	Købt frappé	Sort kaffe, usødet kaffekaffe	8
MILKSHAKE	4	Mælke- og flødebaserede drikkevarer	Chokolademælk, blendet milkshake	Usødet mælk	8
FROSSEN JUICE	2	Naturligt sødede drikkevarer	Appelsinjuice, æblecider	Juice med frugtkød	8

SKYLLEPROGRAM

- Dette program rører indholdet uden at køle, for at skylle enheden.

KRÆVET SUKKERINDHOLD

BEMÆRK: For lidt sukker eller for meget alkohol vil forhindre korrekt frysning og dermed slush-konsistens.

Alle ingredienser skal indeholde mindst 4 % sukker.

ALKOHOLPROCENTER

Sørg for, at din opskrifts samlede alkoholindhold er mellem 2,8 % og 16 % alkohol.

FØR FØRSTE BRUG

LÆS ALLE INSTRUKTIONER FØR DU BRUGER APPARATET

1. Fjern alt emballagemateriale fra enheden.
2. Vask alle dele i varmt sæbevand.
3. Skyl grundigt og lad alle dele lufttørre.
4. Aftør betjeningspanel, motorbase og fordampner med en blød klud. Lad det tørre helt før brug.
5. Placer enheden på køkkenbordet i mindst 4 timer før opstart. Dette giver kølemidlet tid til at sætte sig i kondensatoren og sikrer optimal og sikker brug.

BEMÆRK: Alt tilbehør er BPA-frit. Tilbehøret tåler opvaskemaskine, men må IKKE rengøres med opvaskemaskinens varme tørrefunktion.

PLEJE & VEDLIGEHOLDELSE

BRUG AF SKYLLEPROGRAMMET

1. Hæld eventuelle rester af den frosne drik ud.
2. Stop det aktuelle forudindstillede program. Vælg SKYLLEPROGRAM.
3. Tilsæt varmt vand op til beholderens MAX FYLD-linje.
4. Hæld langsomt vandet ud af enheden med det samme efter påfyldning.
5. Stop SKYLLEPROGRAMMET ved at trykke

på multifunktionsknappen.

6. Tryk på tænd/sluk-knappen for at slukke enheden.

AFMONTERING & RENGØRING

1. Åbn låget i toppen, løft beholderen forsigtigt op for at frigøre den fra sporret i apparatet, og fjern den derefter vandret. Sørg for at holde beholderen nedadvendt for at undgå at restvæske spildes. Anbring den på en passende plads.
2. Skub sneglen (auger) af fordampneren. Sæt til side.
3. Aftør fordampneren med en desinficeret eller varm, fugtig klud.
4. Træk forsigtigt kondensopsamlere ud af enheden, da der kan være resterende væske. Sæt til side.
5. Aftør enheden under fordampneren med en desinficeret eller varm, fugtig klud.
6. Fjern drypbakken og/eller tuden og dækslet, hvis nødvendigt.
7. Vask alle dele i hånden med varmt sæbevand.
8. Aftør motorbasen med en desinficeret eller varm, fugtig klud.
9. Lad alle dele tørre grundigt, før du samler enheden igen og/eller opbevarer den.
10. Efter hver brug:
Fjern frontdækslet til rengøring.
Brug en børste til at rense fordampneren og vandindløbsrøret.
Efter rengøring skal frontdækslet monteres igen, før apparatet bruges på ny.

VEDLIGEHOLDELSE

1. Opbevar enheden oprejst, og opbevar alle dele samlet.
2. Når enheden flyttes, løft den fra bunden af motorbasen.
3. Opbevar IKKE ingredienser inde i beholderen.

Fejlkode & Fejlfinding

Når enheden støder på et problem, vil displayet vise en fejlkode, der angiver det specifikke problem. Fejlkode og deres tilhørende beskrivelser er som følger:

Fejlkode	Beskrivelse
E2	Motor standset, beholder ikke installeret
E3	For lavt sukker- og alkoholindhold
E4	For højt sukker- og alkoholindhold
E5	Fejl ved hældning af maskinen
E6	NTC åben kredsløb
E7	NTC-kortslutning
E8	NTC høj temperatur

SÅDAN LØSES E3 OG E4

LAVT SUKKER – ADVARSEL

Temperaturkontrol falder. Enheden bipper.

SÅDAN LØSES DET:

Tilsæt 1–2 spsk. sukker/juice pr. portion. Tryk på "Forvalg" to gange.


HØJT ALKOHOL-/SUKKERINDHOLD – ADVARSEL

Temperaturkontrol stiger. Enheden bipper.

SÅDAN LØSES DET:

Fortynd med 60 ml vand pr. portion. Tryk på "Forvalg" to gange.

KREDSLØBSDIAGRAM

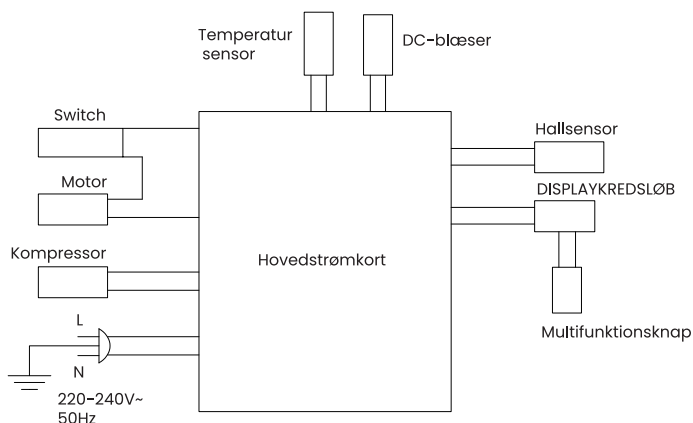

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS
IMPORTANT SAFEGUARDS
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

To reduce the risk of fire, explosion, electric shock or injury when using your frozen drink maker, follow these basic safety precautions:

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
3. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
4. After unboxing the unit for the first time, ensure the unit is upright for at least 2 hours before operating to let the refrigerant oils settle in the air conditioning system for best performance.
5. Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
6. Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
7. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damage in any manner. This appliance has no user-serviceable parts. If damaged, contact authorized dealer for servicing.
8. Extension cords should NOT be used with this appliance.
9. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
10. DO NOT allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
11. DO NOT allow the unit or the cord to contact hot surfaces, including stoves, and other heating appliances.
12. ALWAYS use the appliance on a dry and level surface.
13. ONLY use attachments and accessories that are provided with the product.
14. Keep hands, hair, and clothing out of the container when loading and operating.
15. During operation and handling of the appliance, avoid contact with moving parts.
16. NEVER leave the appliance unattended while in use.
17. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
18. WARNING: DO NOT microwave the containers or accessories provided with the appliance.
19. WARNING: ALWAYS keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
20. WARNING: DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
21. WARNING: DO NOT damage the refrigerant circuit. This warning is only applicable for appliances with refrigerating circuits which are accessible by the user.
22. WARNING: DO NOT use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
23. WARNING: DO NOT add frozen fruit, frozen vegetables, or ice to the unit.
24. WARNING: DO NOT add hot ingredients to the unit.

25. WARNING: DO NOT submerge the motor base or control panel in water or other liquids.
26. WARNING: DO NOT fill vessel past the MAX FILL line.
27. WARNING: DO NOT process hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, or ice cubes.
28. ALWAYS keep the unit upright.
29. This appliance is NOT intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
30. Keep rear and sides of the unit open in order for the compressor to operate properly and not over heat.
31. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
32. WARNING:DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
33. DO NOT damage the refrigerant circuit. This warning is applicable only for appliances with refrigerating circuits that are accessible by the user.
34. When using appliance, make sure both sides and back of it are at least four inches (10.2 cm) away from walls.


WARNING: Risk of fire / flammable materials

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged. DO NOT locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.


WARNING: When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.


WARNING: Dispose of refrigerator in accordance with Federal and Local Regulations. The flammable refrigerant and insulation material used in this product require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your refrigerator.

PARTS

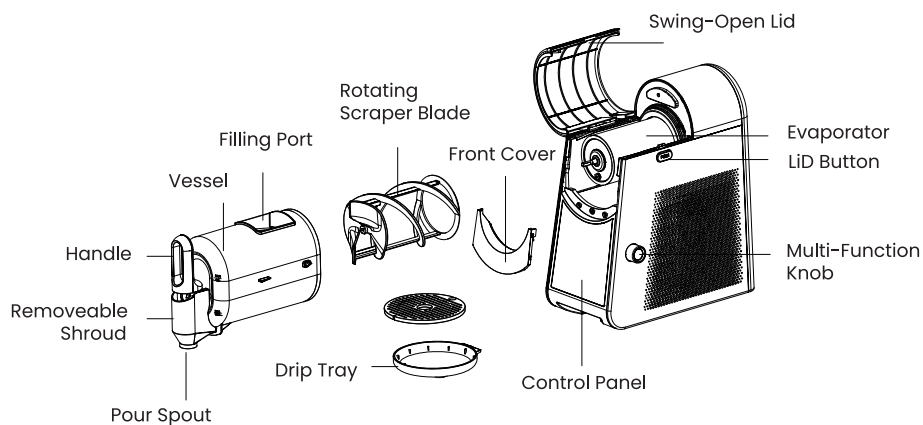

USING THE CONTROL PANEL

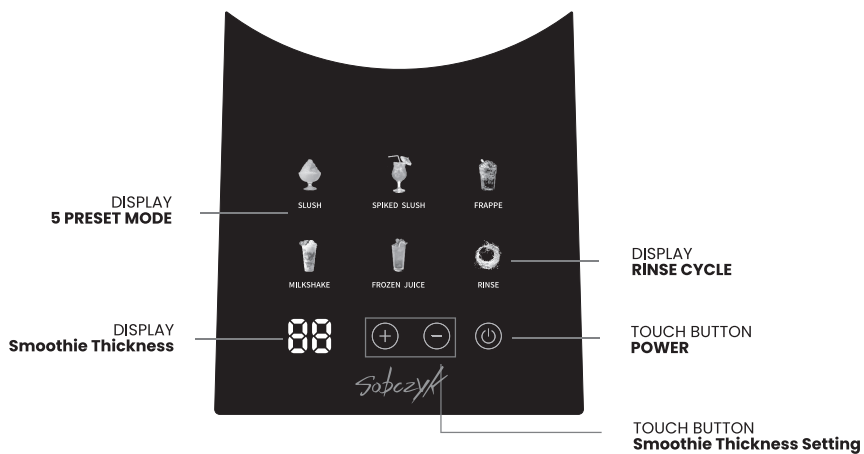

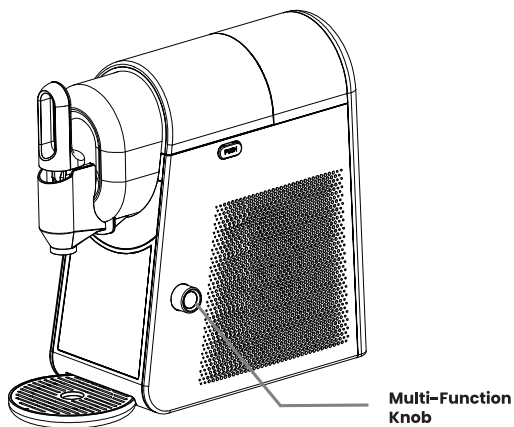

Multi-Function Knob Operation

Select Function: Turn the knob clockwise

- or counterclockwise to browse 5 Preset Modes and RINSE CYCLE.

Activate Function: Press the knob to

- start the selected function.

Pause/Resume: Press the knob again to

- pause; press once more to resume.

- Switch Functions: Rotate the knob at any time to choose a new mode while paused.

Smoothie Thickness Control Setting + / -

- Decrease the thickness level by pressing the “-” on the control panel.
- Increase the thickness level by pressing the “+” on the control panel.

PRESET MODES

MODE	DEFAULT TEMPERATURE	DESIGNET FOR	EXAMPLES	DO NOT	RECOMENDED TEMPERATURE
SLUSH	2	Transforming your everyday beverages	Soda, lemonade	Diet Sodas	8
SPIKED SLUSH	9	Beverages with alcoholic content	Margarita, rosé		10
FRAPPÉ	2	Coffee shop lovers to make frozen treats	Store-bought frappé	Black coffee, unsweetened Coffee	8
MILKSHAKE	4	Dairy- and creamierbased beverages	Chocolate milk, blended milkshake	Unsweetened milk	8
FROZEN JUICE	2	Naturally sweetened beverages	Orange juice, apple cider	Juice with pulp	8

RINSE CYCLE

- This cycle agitates, without cooling, to rinse the unit.

REQUIRED SUGAR CONTENT: NOTE: Too little sugar or too much alcohol will prevent proper freezing of a slush output. All inputs must contain at least 4% sugar.

ALCOHOL PERCENTAGES

Ensure your recipe's total alcohol content is between 2.8% and 16% alcohol.

BEFORE FIRST USE**READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

1. Remove all packaging materials from the unit.
2. Wash all parts in warm, soapy water.
3. Thoroughly rinse and air-dry all parts.
4. Wipe control panel, motor base, and evaporator with a soft cloth. Allow to dry completely before using.
5. Place the unit on countertop for at least hours before operating. This allows the refrigerant to settle in the condenser for optimal and safe use.

NOTE: All attachments are BPA free. Accessories are dishwasher safe but should NOT be cleaned with a heated dry cycle.

**CARE & MAINTENANCE
USING THE RINSE CYCLE**

1. Dispense any remaining frozen drink.
2. Stop the current preset. Select the RINSE CYCLE.
3. Add warm water up to the vessel's max fill line.
4. Slowly dispense the water from the unit immediately after filling.
5. Stop RINSE CYCLE by pressing the Multi-Function Knob.
6. Press the power button to turn the unit off.

DISASSEMBLY & CLEANING

1. Open the top cover, gently lift the container up from the device to disengage it from the groove, then remove it horizontally. Make sure the container is tilted downward to prevent residual liquid. Set it aside.
2. Slide the auger off the evaporator. Set aside.
3. Wipe down the evaporator with a sanitized or warm, damp cloth.
4. Gently slide the condensation catch out of the unit, since there may be residual liquid in the condensation catch. Set aside.
5. Wipe down unit underneath the evaporator with a sanitized or warm, damp cloth.
6. If needed, remove the drip tray and/or spout shroud.
7. Hand-wash all parts in warm, soapy water.
8. Wipe down the motor base with a sanitized or warm, damp cloth.
9. Allow all parts to dry thoroughly before reassembling and/or storing the unit.
10. After each use, remove the front cover for cleaning. Use a brush to clean the evaporator and the water inlet pipe. After cleaning, reinstall the front cover before using again.

MAINTENANCE

1. Store the unit upright and store all parts assembled.
2. When moving the unit, lift from the bottom of the motor base.
3. DO NOT store ingredients inside the vessel.

Error Code & Troubleshooting

When the unit encounters an issue, the display will present an error code to indicate the specific problem. The error codes and their corresponding descriptions are as follows:

Error Code	Descriptions
E2	Motor stopped, vessel not installed.
E3	Low sugar and low alcohol
E4	High sugar and high alcohol content
E5	Machine tilting malfunction
E6	NTC open circuit
E7	NTC short circuit
E8	NTC high temperature

LOW-SUGAR ALERT

DESCENDING TEMPERATURE CONTROL UNIT BEEPS. Error E3

HOW TO FIX:

ADD 1-2 TBSP SUGAR/JUICE PER SERVING. Press the exit button, then press start.

HIGH-ALCOHOL/SUGAR ALERT

ASCENDING TEMPERATURE CONTROL . UNIT BEEPS. Error E4

HOW TO FIX:

DILUTE WITH 60ML WATER PER SERVING . Press the exit button, then press start.

CIRCUIT DIAGRAM

