

Sobczyk

Sobczyk

CrushBlend

Brugermanual

CS-4737



Tekniske data

- Nominel spænding: 220-240V~ 50/60 Hz
- Nominel effekt: 500 W

Vigtige sikkerhedsanvisninger


Før du bruger det elektriske apparat, skal følgende grundlæggende forholdsregler altid følges:

1. Læs alle anvisninger først.
2. Kontrollér før brug, at spændingen i din stikkontakt svarer til apparatets nominelle spænding.
3. Brug ikke apparatet med en beskadiget ledning eller stik, og brug det ikke, hvis apparatet har fejlfunktioner eller er blevet tabt eller beskadiget. Indlevér apparatet til nærmeste autoriserede serviceværksted til undersøgelse, reparation eller elektrisk/mechanisk justering.
4. For at undgå risiko for elektrisk stød må apparatet ikke nedsænkes i vand eller anden væske.
5. Lad ikke ledningen hænge ud over kanten af bord eller bordplade, og lad den ikke berøre varme overflader.
6. For at mindske risikoen for elektrisk stød må produktet aldrig betjenes med våde hænder. Spild ikke væske på det, og nedsæk det ikke i vand eller anden væske.
7. Dette apparat er ikke beregnet til brug af personer (herunder børn) med nedsatte fysiske, sansemæssige eller mentale evner eller med manglende erfaring og viden, medmindre de er under opsyn eller har modtaget instruktion i brugen af apparatet af en person, der er ansvarlig for deres sikkerhed.
8. Børn skal være under opsyn for at sikre, at de ikke leger med eller rører ved apparatet.
9. Vær ekstra opmærksom, når apparatet kører — efterlad det aldrig uden opsyn.
10. Placér ikke apparatet på eller i nærheden af varme gasblus eller en opvarmet ovn.
11. Brug ikke apparatet udendørs — kun til husholdningsbrug.
12. Brug aldrig produktet, når flasken er tom, og fjern ikke flasken, før knivene er stoppet helt.
13. Tag stikket ud af stikkontakten, når apparatet ikke er i brug, før du sætter dele på eller tager dele af, og før rengøring.
14. Undgå kontakt med bevægelige dele.
15. Advarsel: forkert brug kan forårsage alvorlig personskade. Vær forsigtig ved håndtering af knivene, især når kniven tages af flasken, når flasken tømmes, og under rengøring.
16. Hold hænder og redskaber ude af beholderen under blendning for at mindske risikoen for alvorlig personskade eller skade på blenderen.
17. Knivene er skarpe. Håndtér dem forsigtigt.

18. For at mindske risikoen for personskade må knivsamlingen aldrig placeres på basen, uden at beholderen er korrekt monteret.
19. Brug altid blenderen med låget på.
20. Brug altid apparatet på en plan overflade.
21. Brug aldrig tilbehør, som ikke er nævnt i denne brugermanual, herunder syltetøjsglas mv. Tilbehør, der ikke anbefales af producenten, kan medføre risiko for personskade.
22. Blend ikke varme væsker.

Gem denne brugsanvisning.

Produktbeskrivelse

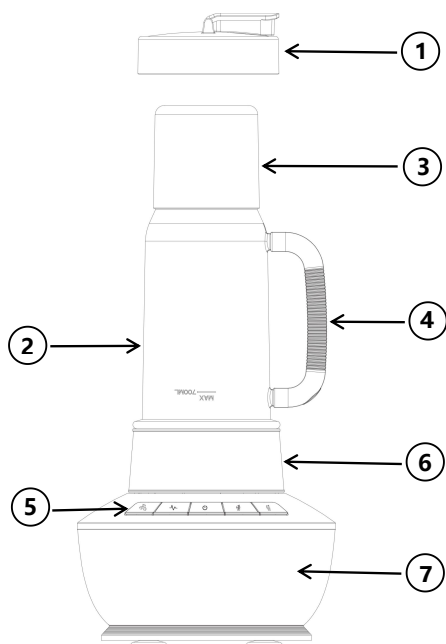

- 1. Låg
- 2. Sportsflaske
- 3. Silikoneholder
- 4. Håndtag
- 5. Betjeningsknapper
- 6. Knivbase
- 7. Motorbase

Betjeningsknapper

Tryk først på tænd-knappen, og vælg derefter en anden funktionsknap.

- Isk nus-knap — tryk for at aktivere isk nus-**funktionen**. Funktion: fuld effekt i intervaller, 1 sekund tændt og 2 sekunder slukket, 10 gentagelser.
- Pulse-knap — tryk og hold for at aktivere; motoren stopper, når du slipper knappen. Funktion: fuld effekt i pulse-drift.
- Tænd-knap — tryk for at tænde eller slukke for strømmen.
- Milkshake-knap — til milkshake eller juice. Funktion: kontinuerlig drift ved fuld effekt i 120 sekunder (ca. 2 minutter).
- Puré-knap — til smoothie eller marmelade. Funktion: kontinuerlig drift ved fuld effekt i 120 sekunder (ca. 2 minutter).

Advarsel

Stikket må først sættes i stikkontakten, EFTER at sportsflasken er korrekt monteret på blenderbasen som beskrevet nedenfor. Og før sportsflasken tages af blenderbasen, skal stikket trækkes ud af stikkontakten.

Blender-funktion til sportsflaske

1. Stil sportsflasken på en plan overflade, og åbn flasken.
2. Fyld flasken med dine foretrukne ingredienser. Alle ingredienser skal fyldes under flaskens MAX-mærke, og der skal tilsættes væske som vand, mælk osv. for at kunne blende.
3. Skru knivbasen fast på flaskens åbne ende.
4. Vend flasken på hovedet, og sæt flasken med knivbasen ned på blenderbasen. Sørg for, at de tre mikrokontakter låser korrekt på plads.
5. Sæt stikket i stikkontakten. Tryk derefter på isk nus-/pulse-/milkshake-/purée-knappen på betjeningspanelet — maskinen begynder at arbejde. Hvis ingredienserne er isterninger, tryk på "Crush"-knappen for isk nus, eller tryk gentagne gange på "Pulse", indtil isen er knust til isflager.
6. Brug ikke sportsflasken, når den er tom.
7. Hvis du vil afbryde programmet under blendning, så tryk på den aktive funktionsknap igen eller på tænd-knappen.
8. Når du er færdig med at blende, vendes flasken om og stilles på en plan overflade. Tag knivbasen af, og sæt drikkelåget på.

Bemærk

1. Sportsflaske og låg tåler opvaskemaskine.
2. Kun til væsker som vand og mælk samt bløde frugter som æbler, bananer, gulerødder osv. Skær frugt i stykker, før det kommes i flasken.
3. Til kolde drikke: sørg for, at isterningerne ikke er større end ca. 2 × 2 cm, og tilsæt altid lidt væske sammen med isen. Anbefalet ismængde er højst 60 g pr. gang.

4. Ved overbelastning stopper motoren automatisk. Træk stikket ud, tøm flasken, og vent ca. 45 minutter, så motoren kan køle af, før du bruger apparatet igen.

Rengøring

1. Træk stikket ud af stikkontakten før rengøring.
2. Tør hoveddelen af med en fugtig klud efter brug, og tør den efter med en tør klud. Hold den absolut væk fra vand og høj luftfugtighed.
3. Vask flasken og knivdelen under rindende vand.
4. Hold børn væk fra den samlede flasken med kniv.
5. Opbevares væk fra direkte sollys og fugtige steder.

Forsigtig: motorbasen og strømledningen må aldrig nedsænkes i vand under rengøring.

Sorteringsvejledning

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.



Fremstillet for og importeret af:

Stock Group A/S

Gammelmarksvej 11

DK-7100 Vejle

www.stockgroup.dk

Sobczyk CrushBlend

User Manual
CS-4737



Technical Data

- Rated voltage: 220-240V~ 50/60 Hz
- Rated power: 500 W

Important Safeguards


Before using the electrical appliance, always follow the basic precautions below:

1. Read all instructions first.
2. Before use, check that the voltage of your wall outlet corresponds to the rated voltage of the appliance.
3. Do not operate the appliance with a damaged cord or plug, and do not use it after the appliance malfunctions or has been dropped or damaged in any way. Return the appliance to the nearest authorized service facility for examination, repair, or electrical/mechanical adjustment.
4. To protect against the risk of electric shock, do not place the appliance in water or any other liquid.
5. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
6. To reduce the risk of electric shock, never operate this product with wet hands, do not spill liquid on it, and do not submerge it in water or any other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or with a lack of experience and knowledge, unless they have been given supervision or instruction in the use of the appliance by a person responsible for their safety.
8. Children must be supervised to ensure they do not play with or touch the appliance.
9. Pay extra attention while the appliance is running; never leave it unattended.
10. Do not place the appliance on or near a hot gas burner or a heated oven.
11. Do not use the appliance outdoors; for household use only.
12. Never operate the product when the bottle is empty, and do not remove the bottle lid before the blades have come to a complete stop.
13. Unplug the appliance from the outlet when it is not in use, before fitting or removing parts, and before cleaning.
14. Avoid contact with moving parts.
15. Warning: misuse may cause serious injury. Take care when handling the cutting blades, especially when removing the blade from the bottle, emptying the bottle, and during cleaning.
16. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
17. Blades are sharp. Handle them carefully.
18. To reduce the risk of injury, never place the cutter-assembly blades on the base without the jar properly attached.

19. Always operate the blender with the cover in place.
20. Always operate the appliance on a flat surface.
21. Never use any attachments not listed in this instruction manual, including canning jars, etc. Attachments not recommended by the manufacturer may cause a risk of injury to persons.
22. Do not blend hot liquids.

Save these instructions.

Product Description

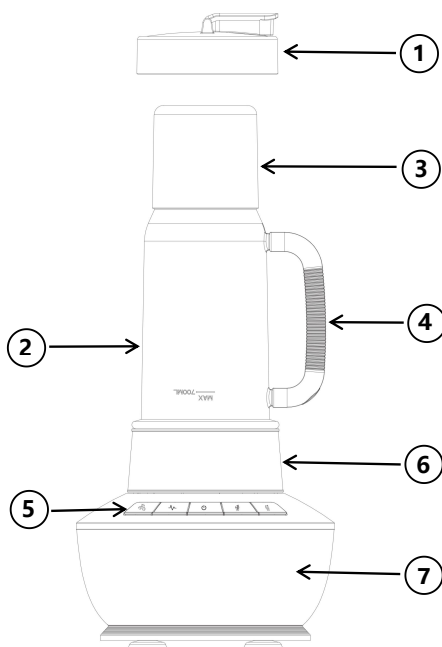

- 1. Lid
- 2. Sport bottle
- 3. Silicone sleeve
- 4. Handle
- 5. Control buttons
- 6. Blade base
- 7. Motor base

Control Buttons

Press the power button first, then choose another function button to use.

- Ice Crush button — press to perform the ice-crush function. Operation: full power in pulses, 1 second on and 2 seconds off, running 10 times.
- Pulse button — press and hold; the motor stops rotating when you release the button. Operation: full-power pulse operation.
- Power button — press to turn the power on or off.
- Milkshake button — for milkshakes or juicing. Operation: continuous operation at full power for 120 seconds (about 2 minutes).
- Puree button — for smoothies or jam. Operation: continuous operation at full power for 120 seconds (about 2 minutes).

Warning

The power plug may only be inserted into a mains outlet AFTER the sport bottle is securely installed on the blender base as described below. Before removing the sport bottle from the blender base, unplug the unit from the mains outlet.

Blender Function for the Sport Bottle

1. Place the sport bottle on a flat surface and open the bottle.
2. Fill the bottle with your favourite ingredients. All ingredients must be below the MAX mark on the bottle, and liquid such as water or milk must be added to blend.
3. Fasten the blade base onto the open end of the bottle.
4. Turn the bottle upside down and place the bottle and blade base together on the blender base. Make sure the three micro-switches lock into the correct position.
5. Connect the power plug to the mains. Then touch the Ice Crush / Pulse / Milkshake / Puree button on the control panel, and the machine starts to work. If the ingredients are ice cubes, touch the “Crush” button for the crush function, or touch “Pulse” intermittently until the ice is crushed into ice flakes.
6. Do not operate the sport bottle when it is empty.
7. If you want to stop the program during blending, press the active function button again or the power button.
8. After blending, turn the bottle over and place it on a flat surface. Remove the blade base and fit the drinking lid.

Notes

1. The sport bottle and lid are dishwasher safe.
2. Use only with liquids such as water and milk and soft fruits such as apples, bananas, carrots, etc. Cut fruit into pieces before putting it in the bottle.
3. For cold drinks, make sure the ice cubes are no larger than about 2 × 2 cm, and always add some liquid together with the ice. The recommended ice quantity is no more than 60 g at a time.

4. If the appliance is overloaded, the motor stops automatically. Unplug it, empty the bottle, and wait about 45 minutes for the motor to cool down before using it again.

Cleaning

1. Unplug the appliance from the wall outlet before cleaning.
2. After use, clean the main body with a damp cloth and dry it with a dry cloth. Always keep it away from water and high humidity.
3. Wash the bottle and blade part under running water.
4. Keep children away from the assembled bottle and blade.
5. Keep the appliance away from direct sunlight and damp places.

Caution: never immerse the motor base or power cord in water for cleaning.

Sorting Guide

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the “crossed-out wheeled bin” are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.



Manufactured for and imported by:

Stock Group A/S

Gammelmarksvej 11

DK-7100 Vejle

www.stockgroup.dk

Mit navn er Casper Sobczyk

Med mere end 20 års erfaring i det kulinariske univers – og som tidligere medlem af det danske kokkelandshold – er det en stor glæde for mig at præsentere min kollektion af professionelt køkkenudstyr.

Hvert eneste redskab i kollektionen er udvalgt og designet med fokus på både funktion og æstetik. Målet er enkelt: at gøre madlavning til en inspirerende og ubesværet oplevelse.

Hver genstand er håndplukket af mig, og du kan være sikker på, at de er skabt til at løfte din madlavning til nye højder.

Velkommen til en verden af køkkenglæde.

God fornøjelse

*Casper
Sobczyk*

